


Balance Rod Ends

www.bartonkramer.com


#319  
SHW BALANCE ROD FOOT

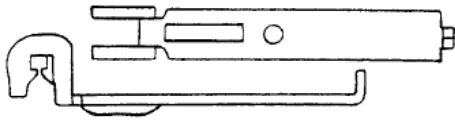

#10663  
NYLON CLAD S.H. METAL FOOT



#1123  
3/8" BALANCE FOOT




#317  
KELLER BALANCE CAP




#1017  
ROUND BALANCE  
ROD CAP




#340  
P.G.T. END SET

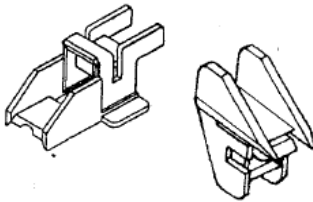


#349  
PAN AM BAL ROD END SET

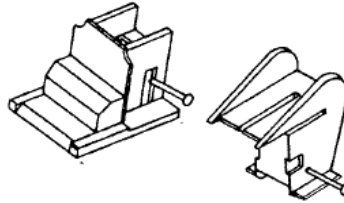


#351  
OLD SECURITY, JONES

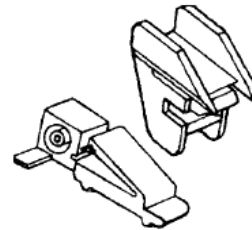


#352  
YALE OGRON

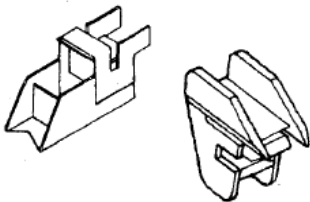


#353  
KINCO, CLEARVIEW, NU AIR

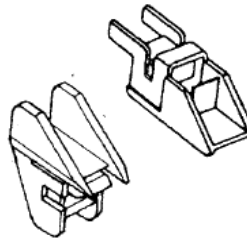


#350  
GEORGIA/PALM BEACH  
TOP FOOT

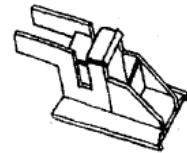


#358  
AIRELOCK GUIDE

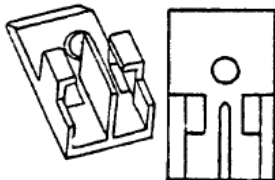

#359  
AIRELOCK SHW ROD FOOT

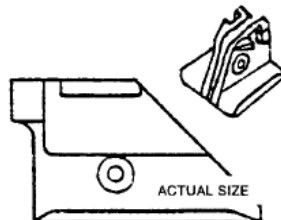


#510  
AIR CONTROL S.H. NYLON SHOE

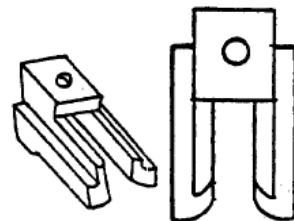


Balance Rod Ends

www.bartonkramer.com


#1012  
STANLEY SH FT. W/PLASTIC BASE

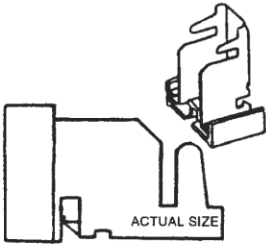


#1014  
TUCKER S.H. METAL &  
PLASTIC SHOE

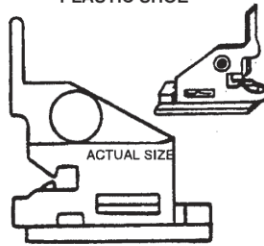


#1016  
ABC/HARCAR METAL SHOE

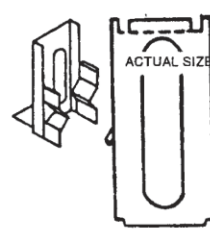


#1034  
ABC BALANCE FT.

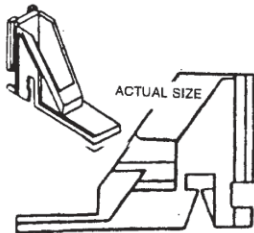


#1037  
STANLEY TUCKER FOOT

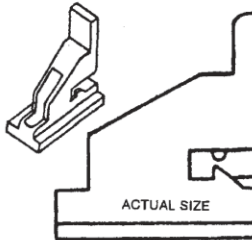


#1040  
CROSSLY #780

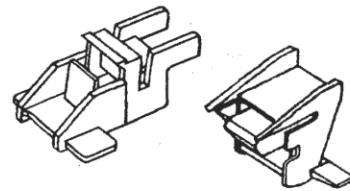


#1041  
A.C. SMALL SH PLASTIC FOOT

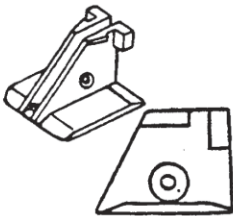


#1042  
CROSSLY #700

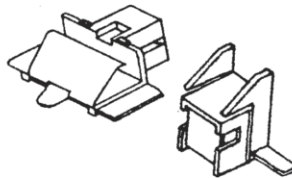


#1111  
C.E., MILLER, ANDERSON

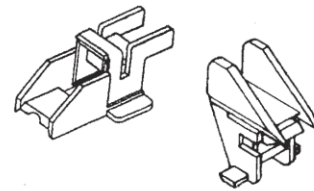


#1116  
LOOK METAL RD BAL FOOT

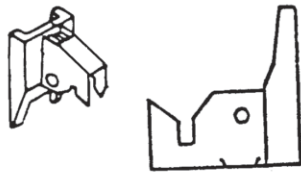


#1208  
OLD PAN AM BAL/ROD FOOT

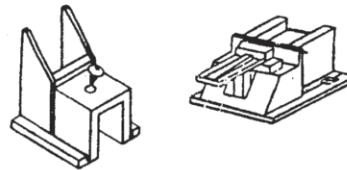


#10197  
C.E./MILLER TOP FOOT

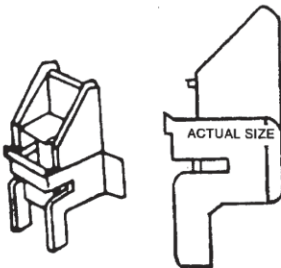

#10239  
OLD PAN AM S.H. BOTTOM FOOT

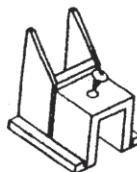


#10240  
OLD PAN AM S.H. TOP FOOT

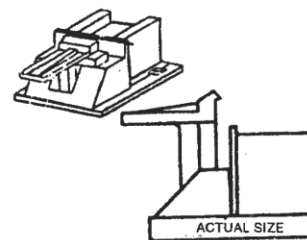


Balance Rod Ends

www.bartonkramer.com


#10301  
KELLER INTERMEDIATE

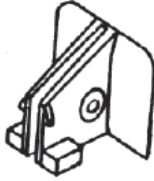


#10327  
YALE TOP FOOT

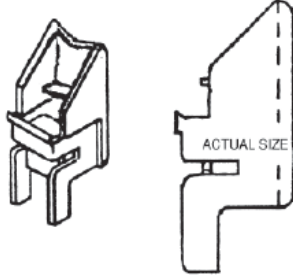


#10328  
SECURITY/YALE/KINCO  
BOTTOM FOOT

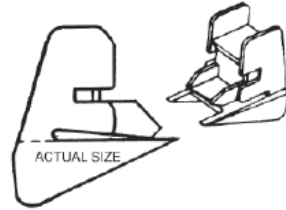


#10329  
OLD SECURITY-JONES TOP FOOT

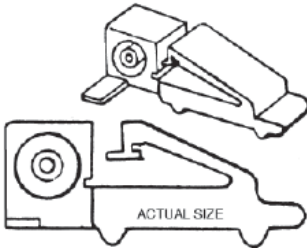


#10410  
PAN AM TOP FOOT

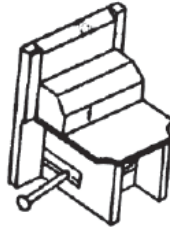


#10411  
PAN AM BOTTOM FOOT

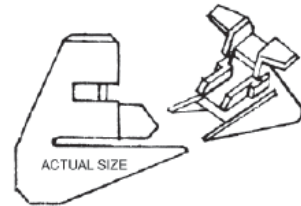


#10412  
KINCO TOP FOOT

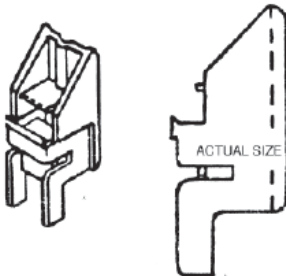


#10554  
NEW SECURITY TOP FOOT

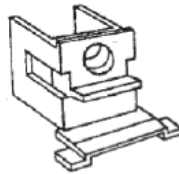


#1212  
TRACO ENDS SET  
IMPACT

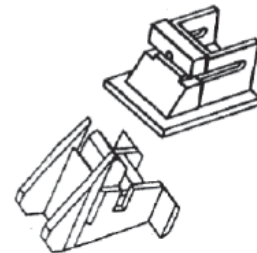


#10625  
CAPITAL TOP FOOT

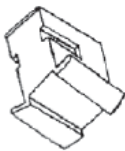

#360  
NEW SECURITY ENDS SET

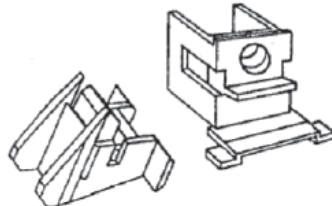

#10725  
TRACO TOP FOOT IMPACT

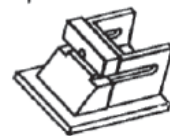


#10664  
S.H. FOOT WITH METAL HOOK



#10665  
SILVERLINE TOP S.H. FOOT



#10666  
SILVERLINE BOTTOM FOOT

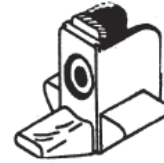


#354  
BALANCE ROD RIVET  
5/8" LENGTH




#10247  
SMALL RIVET  
FOR AIRE-LOK  
1 1/32" Length



#363  
ROLLYSON

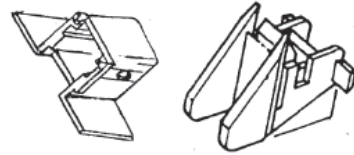

#344  
SHW BAL ROD WINDER TOOL

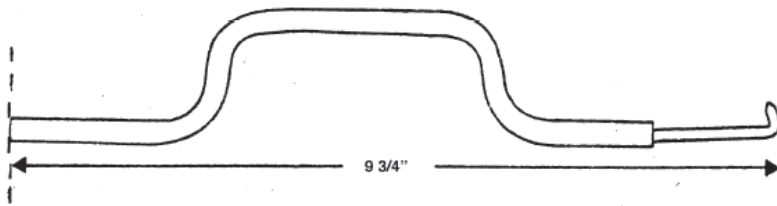

#365  
METAL SHW TAKE OUT CLIP

