
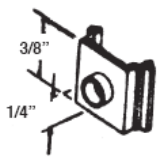
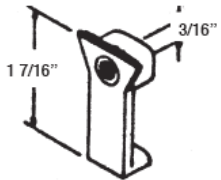
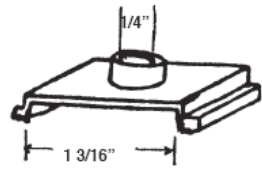
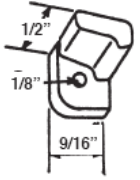




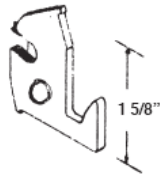
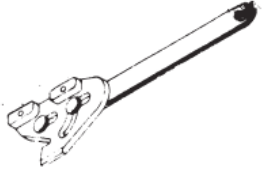
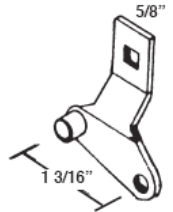
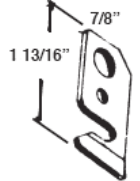
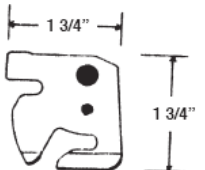

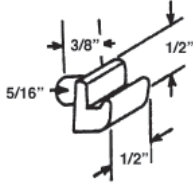


<p>#941 P.A. SLIDE BAR GUIDE</p> 	<p>#942 SLIDE BAR GUIDE</p> 	<p>#946 KELLER A.T.W. SLIDE BAR GUIDE</p> 
<p>#1032 ABC BOTTOM VENT LATCH</p> 	<p>#1033 ABC INTERMEDIATE VENT LATCH</p> 	<p>#1035 STANLEY TOP VENT BLOCK</p> 
<p>#1036 STANLEY INTERMEDIATE VENT LATCH PAIRS</p> 	<p>#1039 ANDERSON VENT LOCK (PRS.)</p> 	<p>#1109 SUPERIOR CAM LOCK W/RIVET</p> 
<p>#1335 YALE ATW VENT LOCK</p> 	<p>#1336 HARCAR ATW VENT LOCKS-PAIRS</p> 	<p>#1338 AAA WINDOW VENT HINGE-PAIRS</p> 
<p>#1339 TUCKER T.M. VENT LOCK-PAIRS</p> 	<p>#1340 TUCKER T.M. VENT LOCK-PAIRS</p> 	<p>#1338 AAA WINDOW VENT HINGE-PAIRS</p> 

Slide Guide & Vent Locks


#309
KELLER A.T.W. VENT PIN

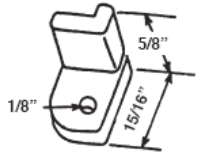

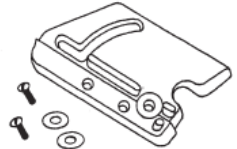
#1342
KELLER VENT LOCKS-PRS




#1344
ABC ATW CONTROL
BRACKETS

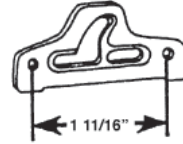


#1203
STANLEY SLIDE GUIDE

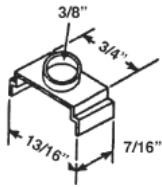


#10137
YALE SLIDE BAR GUIDE

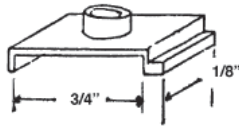

#1038
STANLEY CONTROL
BRACKET



#10015
PAN AM VENT LOCK PAIRS

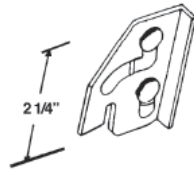


#10014
HARCAR PLASTIC VENT LOCK PRS.



RIVET #204


#10381
1/4" CORNER FOR WINDOW

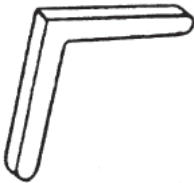

#10382
3/16" CORNER FOR WINDOW



#10383
1/8" MIAMI SLIDE CORNERS

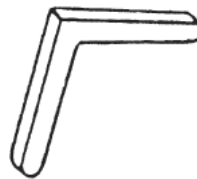

#10602
1/8" MIAMI SLIDE CORNERS
PAIRS

